


Intensity Pro/Shuttle HD Capture Card Setup and Troubleshooting

With HD Inspection Cameras

**** Administrator rights is need to apply the settings ****

1. Go to <http://www.blackmagic-design.com/support>), download and install the latest drivers for your Intensity Pro frame grabber express card.
2. Open “*Black Magic Design Control Panel*” from the Windows Control Panel.
3. Select the settings as shown in the image below and click *Apply* and *OK*.


“Set Default video standard” as **HD 1080i 59.94 for W10x-HD**
HD 1080i 50 for W20x-HD (EU),
HD 1080i 59.94 for W20x-HD (US),

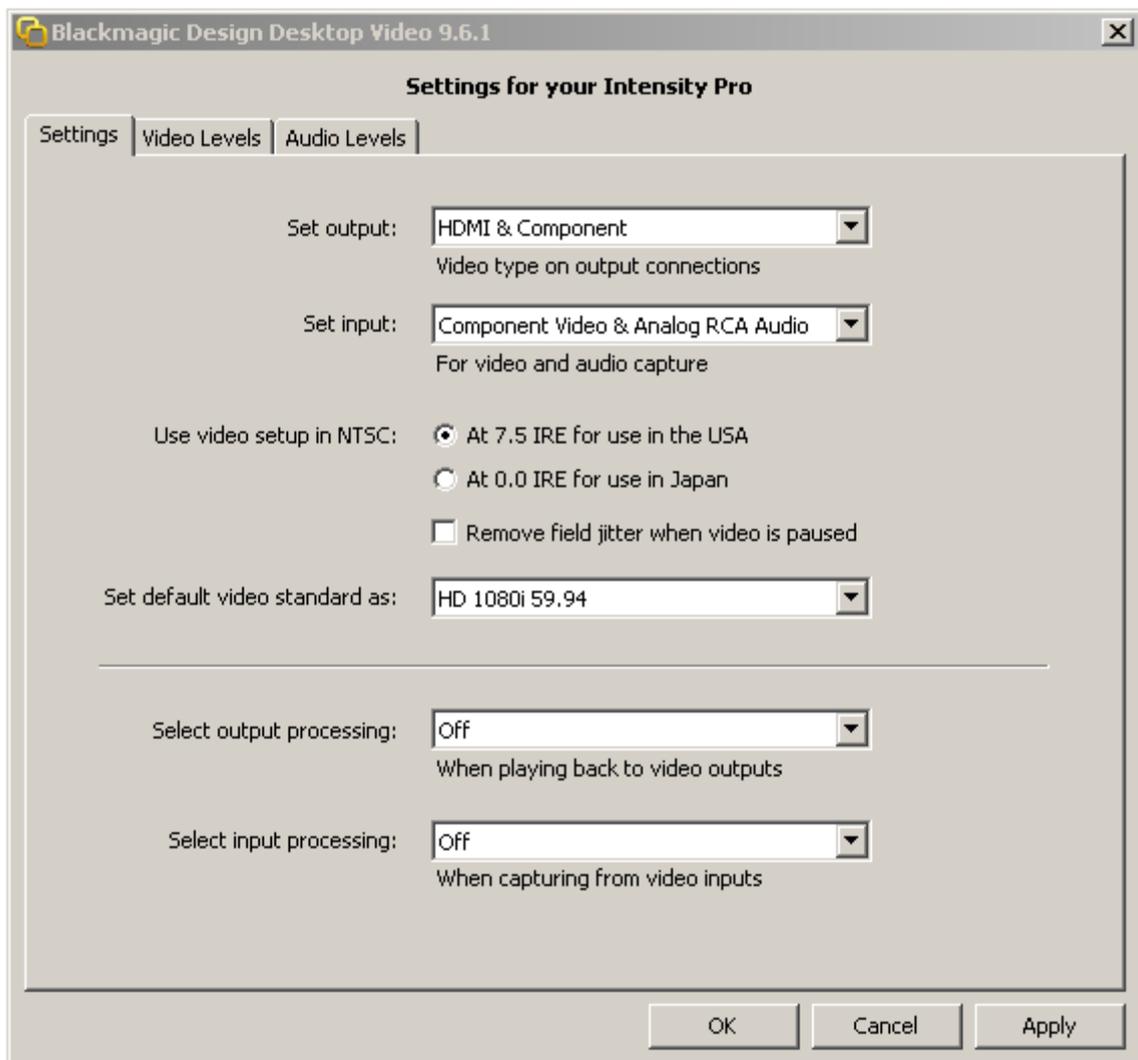

4. Run OptiPix and select “Decklink Video Capture” from the **Device->Input Device**



5. Open the Device properties in OptiPix from **Device -> Device Properties** and set the correct resolution as it shown in the image below, Click *Apply* and *OK*

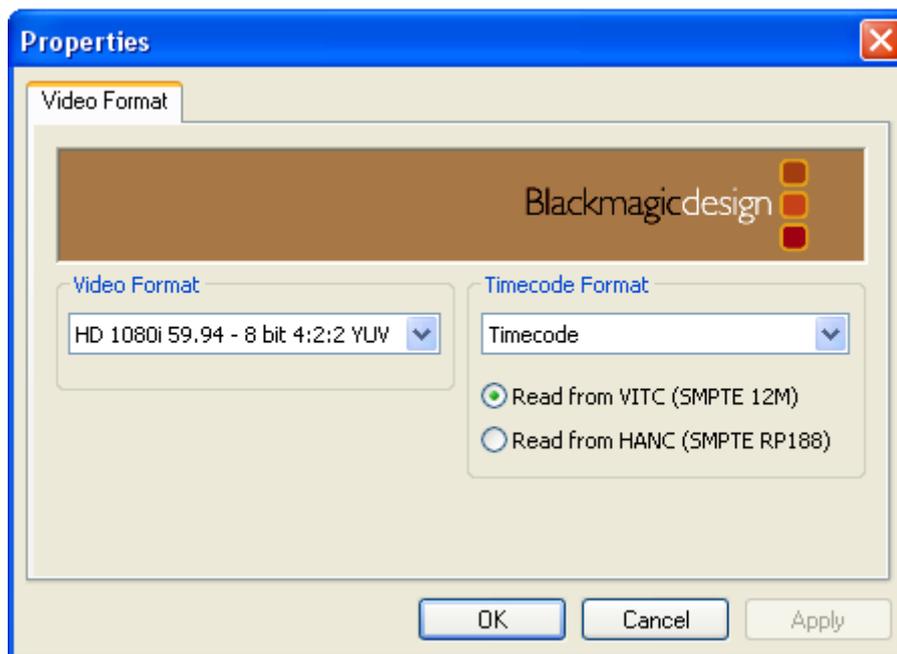

6. Press *F12* on your keyboard or select “Decklink Video Capture” from the **Device->Input Device** again to restart the camera. The live image should be visible.

Troubleshooting

- ***There is no image on OptiPix:***


Check you have the same correct format in the Video Capture filter and HD camera. Refer to camera's user's manual and HD Control Software manual to view/set HD video format. If the resolutions are correct. Check the input/outputs of the capture card are connected correctly and capture card software settings are correct (Step 3).

- ***I cannot change the settings on the "Black Magic Design Control Panel":***


This problem indicates that driver installation failed. Please try to re-install the newest drivers (Step 1). Please also check that your PC complies with the Optilia Systems Requirements.

- ***I am changing the format at OptiPix but it doesn't keep the correct setting.***


- Install the Optilia AmCap if it's not already installed.
- Start the Optilia AmCap and make sure that "Preview" is **not checked** in the **Options** Menu
- Select "*Decklink Video Capture*" from the **Devices** Menu

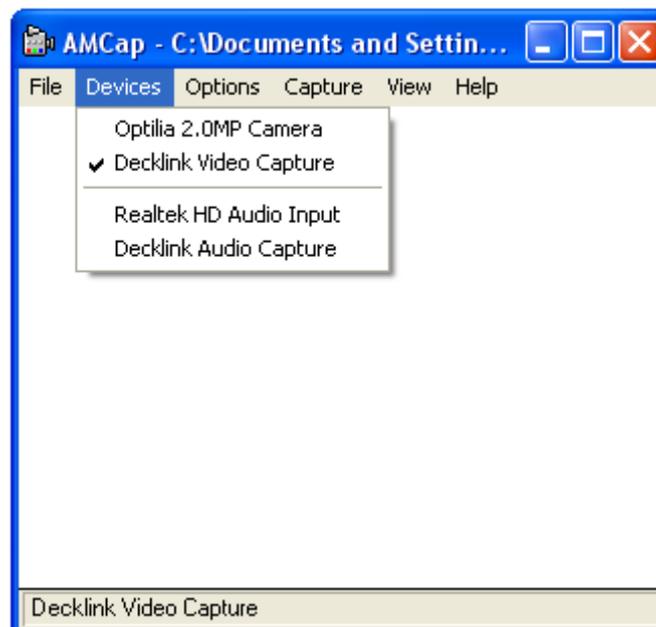

- Click “*Video Capture Filter*” from **Options** Menu

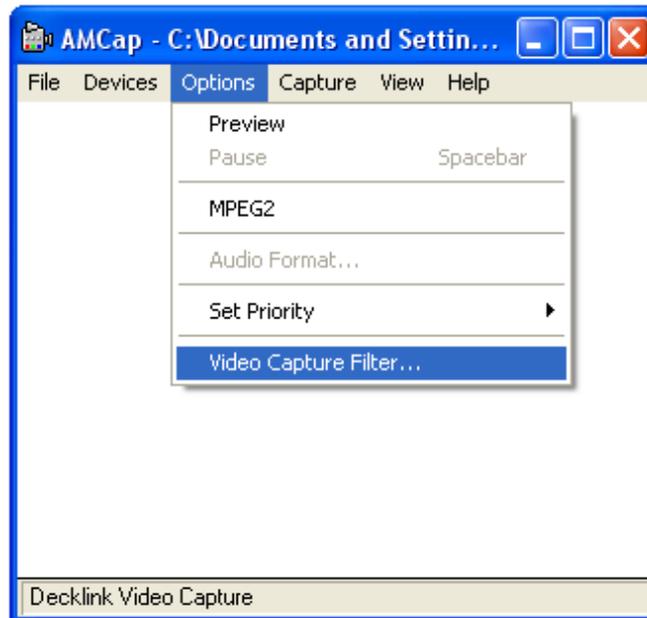

- Set the correct settings as it shown in the image below. First click Apply and then OK

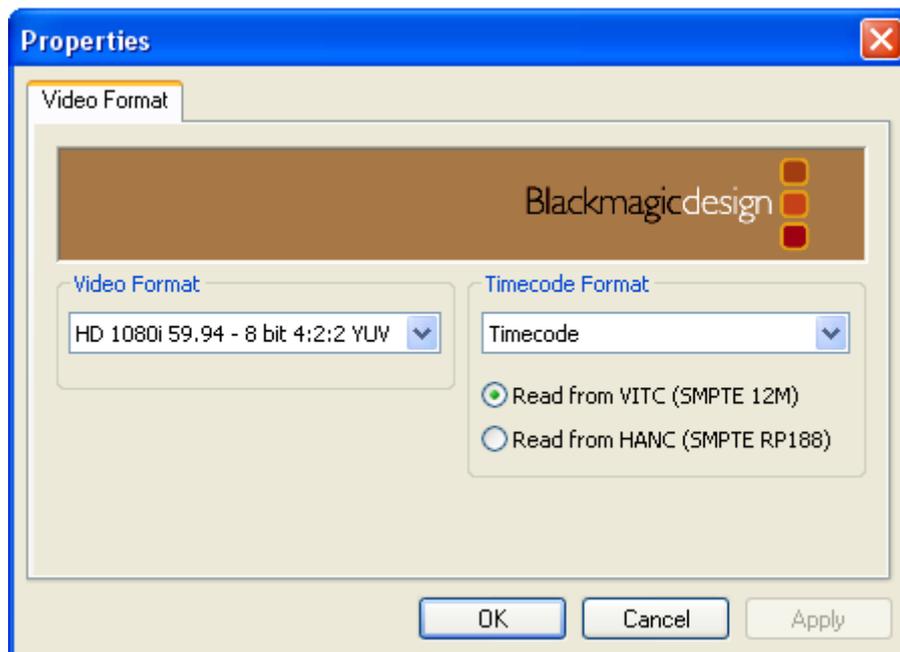

- Close Optilia AmCap and start Optilia AmCap again.
- Select “*Preview*” from the Options Menu.
- Now the live image is visible on AmCap.
- Run OptiPix and select “*Decklink Video Capture*” from the **Device->Input Device**

